


User's guide pantograph P.

How to increase the tension, adjust of pantograph clutch.

Maximum load of pantograph is 15 kgs. It requires to be adjusted periodically when used. If it turns out that although the load is less than 15 kg, and the equipment starts to move down, one should be in accordance with the images shown on the following steps to increase the tension of the clutch. To do this, use the 4mm square spanner and turn the pressure element clockwise (as normal when tightening the screws).

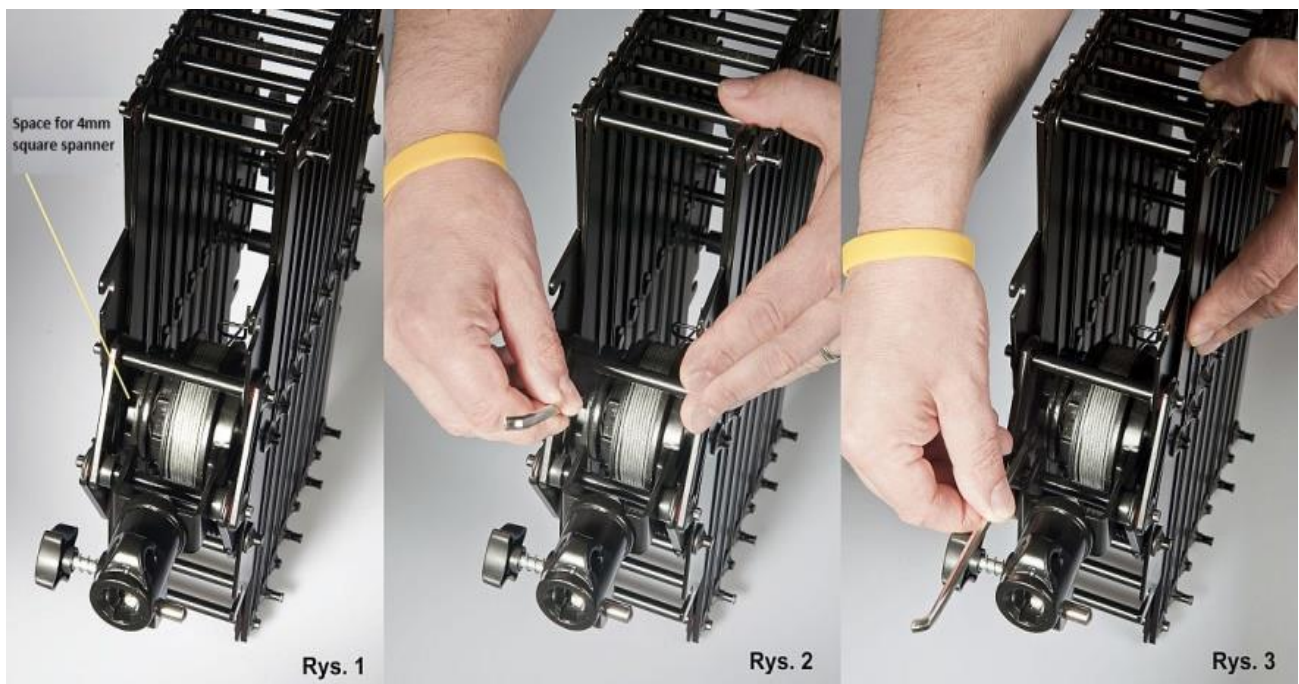

Tension is to be set experimentally on the principle of "small steps" by doing a small turnover and checking whether the pantograph works properly.